

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

### Product Information

Common features of Zytel® nylon resin include mechanical and physical properties such as high mechanical strength, excellent balance of stiffness and toughness, good high temperature performance, good electrical and flammability properties, good abrasion and chemical resistance. In addition, Zytel® nylon resins are available in different modified and reinforced grades to create a wide range of products with tailored properties for specific processes and end-uses. Zytel® nylon resin, including most flame retardant grades, offer the ability to be coloured.

The good melt stability of Zytel® nylon resin normally enables the recycling of properly handled production waste. If recycling is not possible, DuPont recommends, as the preferred option, incineration with energy recovery (-31kJ/g of base polymer) in appropriately equipped installations. For disposal, local regulations have to be observed.

Zytel® nylon resin typically is used in demanding applications in the automotive, furniture, domestic appliances, sporting goods and construction industry.

**Zytel® 101F NC010 is an internally lubricated polyamide 66 resin for injection molding. It was developed for fast cycles and high productivity.**

General information	Value	Unit	Test Standard
Resin Identification	PA66	-	ISO 1043
Part Marking Code	PA66	-	ISO 11469
Rheological properties	dry / cond	Unit	Test Standard
Viscosity number	150 / *	cm <sup>3</sup> /g	ISO 307, 1157, 1628
Molding shrinkage, parallel	1.4 / -	%	ISO 294-4, 2577
Molding shrinkage, normal	1.4 / -	%	ISO 294-4, 2577
Postmolding shrinkage, normal, 48h at 175°F	0.1 / *	%	ISO 294-4
Postmolding shrinkage, parallel, 48h at 175°F	0.2 / *	%	ISO 294-4
Mechanical properties	dry / cond	Unit	Test Standard
Tensile Modulus	3100 / 1400	MPa	ISO 527-1/-2
Yield stress	82 / 55	MPa	ISO 527-1/-2
Yield strain	4.5 / 25	%	ISO 527-1/-2
Nominal strain at break	20 / >50	%	ISO 527-1/-2
Strain at Break, 23°C, 50mm/min	40 / -	%	ISO 527-1/-2
Flexural Modulus	2800 / 1200	MPa	ISO 178
Poisson's ratio	0.37 / 0.43	-	ISO 527-1/-2
Tensile creep modulus			ISO 899-1
1h	* / 1400	MPa	
1000h	* / 930	MPa	
Charpy impact strength			ISO 179/1eU
73°F	N / N	kJ/m <sup>2</sup>	
-22°F	400 / N	kJ/m <sup>2</sup>	
Charpy notched impact strength			ISO 179/1eA
73°F	6 / 13	kJ/m <sup>2</sup>	
-22°F	4.5 / 3	kJ/m <sup>2</sup>	
Izod notched impact strength			ISO 180/1A
73°F	5.5 / 11	kJ/m <sup>2</sup>	
-22°F	6 / 4	kJ/m <sup>2</sup>	
-40°F	5.5 / 3	kJ/m <sup>2</sup>	A
Izod impact strength			ISO 180/1U
73°F	300 / N	kJ/m <sup>2</sup>	
-22°F	300 / N	kJ/m <sup>2</sup>	A
A: Assessed			
Thermal properties	dry / cond	Unit	Test Standard
Melting temperature, 18°F/min	262 / *	°C	ISO 11357-1/-3
Glass transition temperature, 18°F/min	60 / -	°C	ISO 11357-1/-2

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

#### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

#### Asia Pacific

Tel: +81 3 5521 8600

#### Europe/Middle East/Africa

Tel: +41 22 717 51 11



# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Temp. of deflection under load			ISO 75-1/-2
260 psi	70 / *	°C	
65 psi	190 / *	°C	
Vicat softening temperature, 90°F/h, 11 lbf	240 / *	°C	ISO 306
Coeff. of linear therm. expansion, parallel	100 / *	E-6/K	ISO 11359-1/-2
Coeff. of linear therm. expansion, normal	110 / *	E-6/K	ISO 11359-1/-2
Thermal conductivity of melt	0.16	W/(m K)	-
Spec. heat capacity of melt	2790	J/(kg K)	-
Eff. thermal diffusivity	5E-8	m <sup>2</sup> /s	-
RTI, electrical			UL 746B
30mil	130 / *	°C	
60mil	130 / *	°C	
120mil	130	°C	
240mil	130	°C	
RTI, impact			UL 746B
30mil	75	°C	
60mil	75 / *	°C	
120mil	75	°C	
240mil	75	°C	
RTI, strength			UL 746B
30mil	85	°C	
60mil	85 / *	°C	
120mil	85	°C	
240mil	85	°C	
<b>Flammability</b>	<b>dry / cond</b>	<b>Unit</b>	<b>Test Standard</b>
Burning Behav. at 60mil nom. thickn.	V-2 / *	class	IEC 60695-11-10
Thickness tested	1.5 / *	mm	IEC 60695-11-10
UL recognition	yes / *	-	UL 94
Burning Behav. at thickness h	V-2 / *	class	IEC 60695-11-10
Thickness tested	0.71 / *	mm	IEC 60695-11-10
Oxygen index	28 / *	%	ISO 4589-1/-2
Glow Wire Flammability Index			IEC 60695-2-12
30mil	960 / -	°C	
60mil	960 / -	°C	
120mil	960 / -	°C	
Glow Wire Ignition Temperature			IEC 60695-2-13
30mil	725 / -	°C	
60mil	750 / -	°C	
120mil	800 / -	°C	
FMVSS Class	SE	-	ISO 3795 (FMVSS 302)
<b>Electrical properties</b>	<b>dry / cond</b>	<b>Unit</b>	<b>Test Standard</b>
Relative permittivity			IEC 60250
100Hz	3.8 / 8	-	
1MHz	3.6 / 4.6	-	
Dissipation factor			IEC 60250
100Hz	140 / -	E-4	
1MHz	180 / 1000	E-4	
Volume resistivity	1E13 / >1E13	Ohm*m	IEC 60093
Electric strength	31.5 / 26	kV/mm	IEC 60243-1
CTI, 23°C	0 / -	PLC	UL 746A
<b>Other properties</b>	<b>dry / cond</b>	<b>Unit</b>	<b>Test Standard</b>
Humidity absorption, 80mil	2.6 / *	%	Sim. to ISO 62
Water absorption, 80mil	8.5 / *	%	Sim. to ISO 62
Density	1140 / -	kg/m <sup>3</sup>	ISO 1183
Density of melt	970	kg/m <sup>3</sup>	-

Revised: 2017-10-18

Page: 2 of 12

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa

Tel: +41 22 717 51 11



Copyright 2017 DuPont. The DuPont Oval Logo is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Film Properties	dry / cond	Unit	Test Standard
Strain at yield, parallel	4.5 / *	%	ISO 527-3
VDA Properties	dry / cond	Unit	Test Standard
Emission of organic compounds	6.5	µgC/g	VDA 277
Odor test	3	class	VDA 270
Fogging, G-value (condensate)	0.1 / *	mg	ISO 6452
Injection	dry / cond	Unit	Test Standard
Drying Recommended	yes	-	-
Drying Temperature	≥80	°C	-
Drying Time, Dehumidified Dryer	2 - 4	h	-
Processing Moisture Content	≤0.2	%	-
Melt Temperature Optimum	290	°C	-
Min. melt temperature	280	°C	-
Max. melt temperature	300	°C	-
Max. screw tangential speed	0.4 / *	m/s	-
Mold Temperature Optimum	70	°C	-
Min. mold temperature	50	°C	-
Max. mold temperature	90	°C	-
Hold pressure range	50 - 100	MPa	-
Hold pressure time	4	s/mm	-
Ejection temperature	190	°C	-

Characteristics			
Processing	• Injection Molding		
Delivery form	• Pellets		
Additives	• Release agent		
Regional Availability	• North America • Europe	• Asia Pacific • South and Central America	• Near East/Africa • Global

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa

Tel: +41 22 717 51 11




# DuPont™ Zytel® 101F NC010


## NYLON RESIN

### Diagrams

#### Dynamic Shear modulus-temperature (cond.)

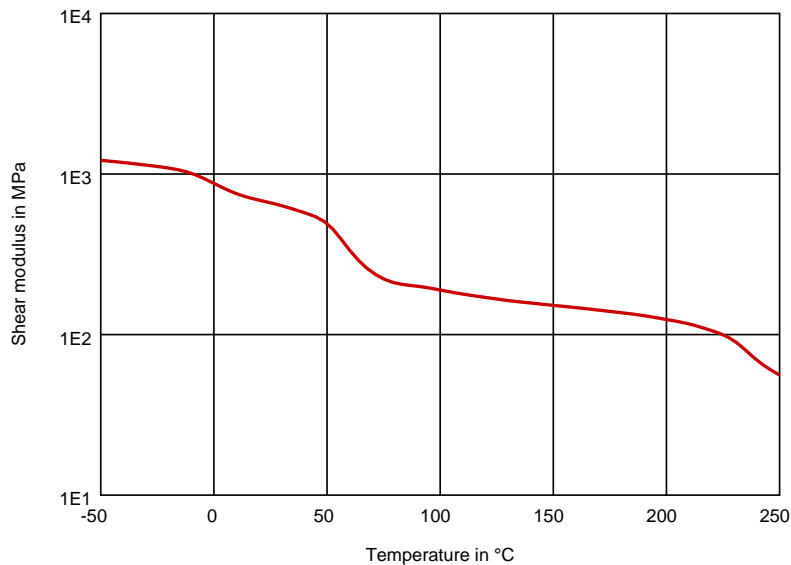


#### Dynamic Tensile modulus-temperature (dry)

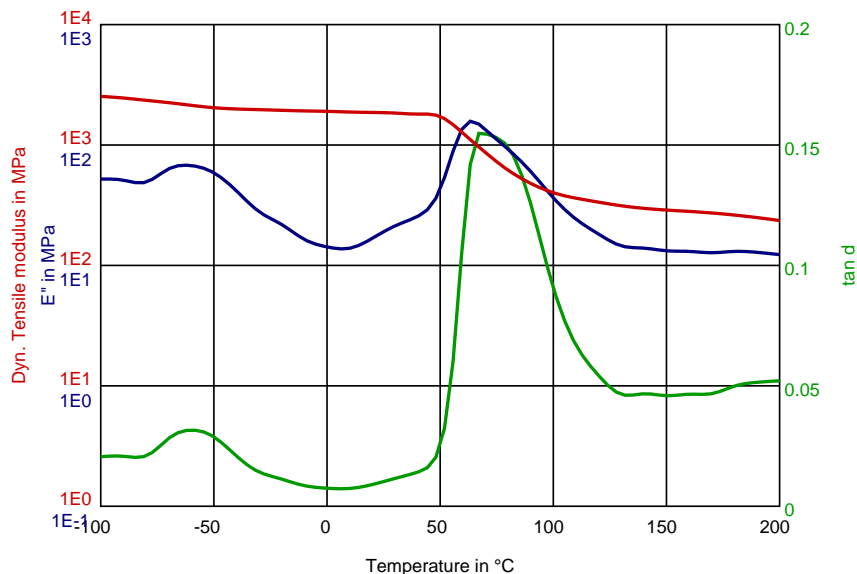

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Dynamic Tensile modulus-temperature (cond.)

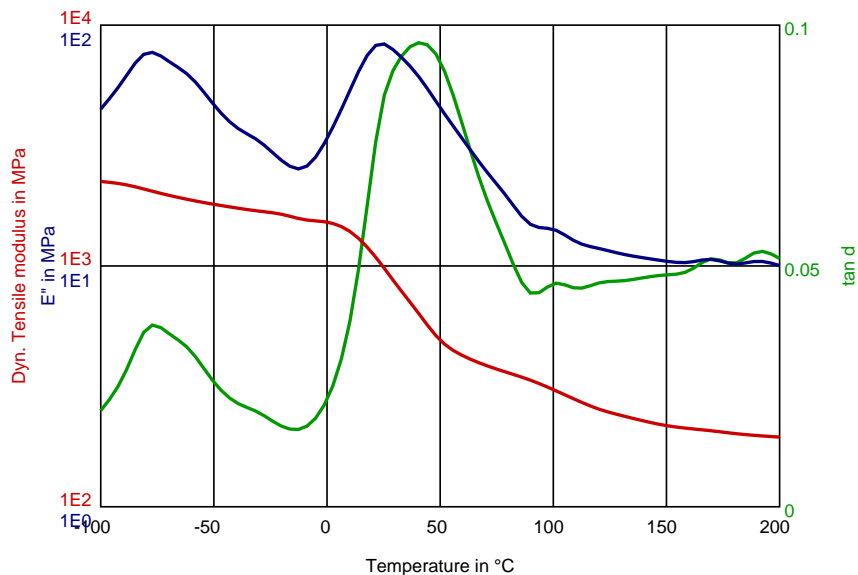

Revised: 2017-10-18

Page: 5 of 12

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

**North America**

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

**Asia Pacific**

Tel: +81 3 5521 8600

**Europe/Middle East/Africa**

Tel: +41 22 717 51 11


Copyright 2017 DuPont. The DuPont Oval Logo is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.



# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Stress-strain (dry)

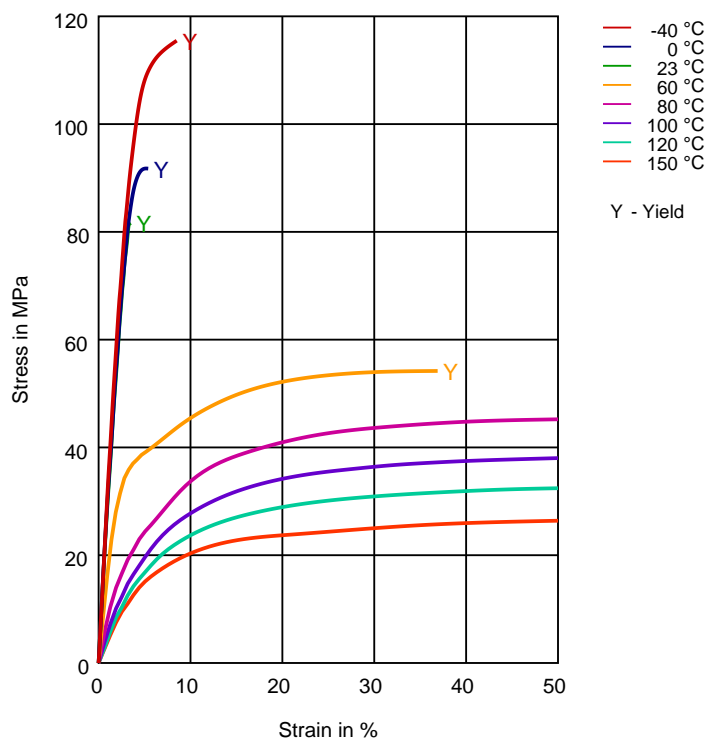

Revised: 2017-10-18

Page: 6 of 12

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa

Tel: +41 22 717 51 11




Copyright 2017 DuPont. The DuPont Oval Logo is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Stress-strain (cond.)

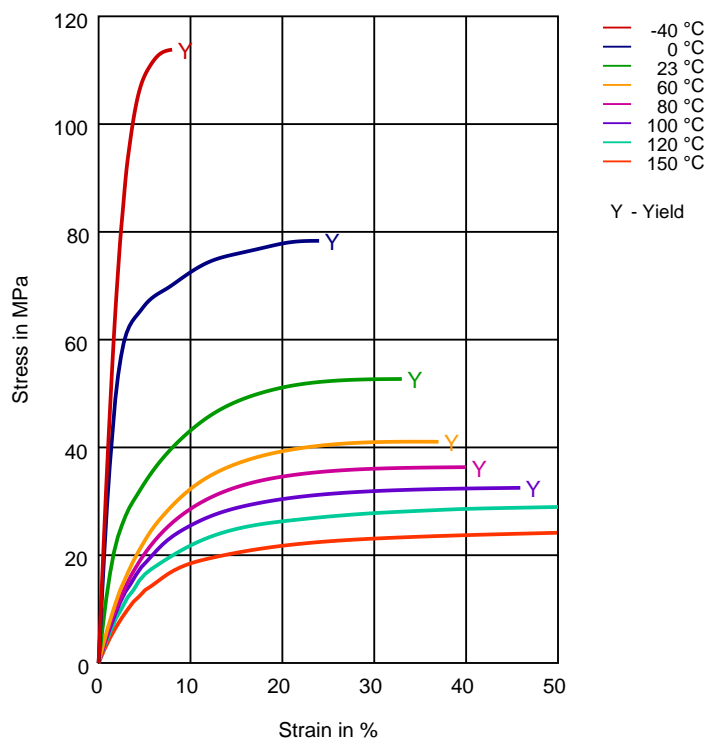

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa


Tel: +41 22 717 51 11



# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Secant modulus-strain (dry)

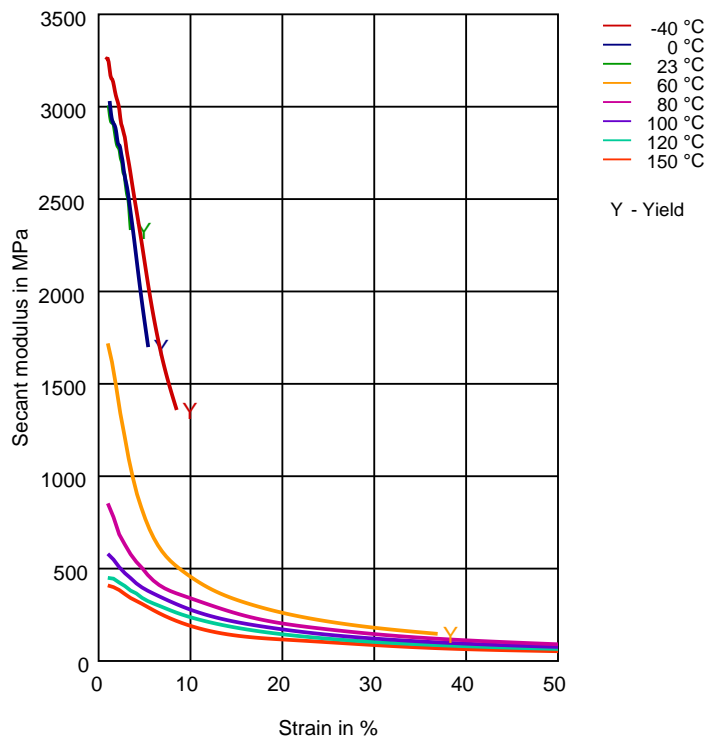

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa

Tel: +41 22 717 51 11






# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Secant modulus-strain (cond.)

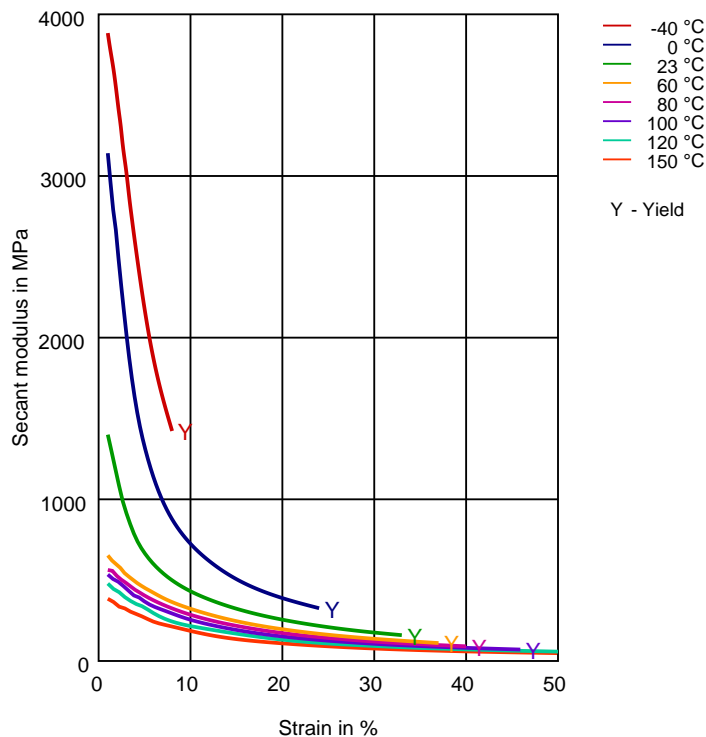

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

### Asia Pacific

Tel: +81 3 5521 8600

### Europe/Middle East/Africa

Tel: +41 22 717 51 11



# DuPont™ Zytel® 101F NC010

## NYLON RESIN

### Chemical Media Resistance

#### Acids

- ✓ Acetic Acid (5% by mass) (23 °C)
- ✓ Citric Acid solution (10% by mass) (23 °C)
- ✓ Lactic Acid (10% by mass) (23 °C)
- ✗ Hydrochloric Acid (36% by mass) (23 °C)
- ✗ Nitric Acid (40% by mass) (23 °C)
- ✗ Sulfuric Acid (38% by mass) (23 °C)
- ✗ Sulfuric Acid (5% by mass) (23 °C)
- ✗ Chromic Acid solution (40% by mass) (23 °C)

#### Bases

- ✗ Sodium Hydroxide solution (35% by mass) (23 °C)
- ✓ Sodium Hydroxide solution (1% by mass) (23 °C)
- ✓ Ammonium Hydroxide solution (10% by mass) (23 °C)

#### Alcohols

- ✓ Isopropyl alcohol (23 °C)
- ✓ Methanol (23 °C)
- ✓ Ethanol (23 °C)

#### Hydrocarbons

- ✓ n-Hexane (23 °C)
- ✓ Toluene (23 °C)
- ✓ iso-Octane (23 °C)

#### Ketones

- ✓ Acetone (23 °C)

#### Ethers

- ✓ Diethyl ether (23 °C)

#### Mineral oils

- ✓ SAE 10W40 multigrade motor oil (23 °C)
- ✗ SAE 10W40 multigrade motor oil (130 °C)
- ✗ SAE 80/90 hypoid-gear oil (130 °C)
- ✓ Insulating Oil (23 °C)
- ✗ Motor oil OS206 304 Ref.Eng.Oil, ISP (135 °C)
- ✗ Automatic hypoid-gear oil Shell Donax TX (135 °C)
- ✗ Hydraulic oil Pentosin CHF 202 (125 °C)

#### Standard Fuels

- ✓ ISO 1817 Liquid 1 - E5 (60 °C)
- ✓ ISO 1817 Liquid 2 - M15E4 (60 °C)
- ✓ ISO 1817 Liquid 3 - M3E7 (60 °C)

Revised: 2017-10-18

Page: 10 of 12

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

#### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

#### Asia Pacific

Tel: +81 3 5521 8600

#### Europe/Middle East/Africa

Tel: +41 22 717 51 11



Copyright 2017 DuPont. The DuPont Oval Logo is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

- ✓ ISO 1817 Liquid 4 - M15 (60°C)
- ✓ Standard fuel without alcohol (pref. ISO 1817 Liquid C) (23°C)
- ✓ Standard fuel with alcohol (pref. ISO 1817 Liquid 4) (23°C)
- ✓ Diesel fuel (pref. ISO 1817 Liquid F) (23°C)
- ✓ Diesel fuel (pref. ISO 1817 Liquid F) (90°C)
- ✗ Diesel fuel (pref. ISO 1817 Liquid F) (>90°C)

### Salt solutions

- ✓ Sodium Chloride solution (10% by mass) (23°C)
- ✗ Sodium Hypochlorite solution (10% by mass) (23°C)
- ✓ Sodium Carbonate solution (20% by mass) (23°C)
- ✓ Sodium Carbonate solution (2% by mass) (23°C)
- ✗ Zinc Chloride solution (50% by mass) (23°C)

### Other

- ✓ Ethyl Acetate (23°C)
- ✗ Hydrogen peroxide (23°C)
- ✗ DOT No. 4 Brake fluid (130°C)
- ✗ Ethylene Glycol (50% by mass) in water (108°C)
- ✓ 1% nonylphenoxy-polyethyleneoxy ethanol in water (23°C)
- ✓ 50% Oleic acid + 50% Olive Oil (23°C)
- ✓ Water (23°C)
- ✗ Water (90°C)
- ✗ Phenol solution (5% by mass) (23°C)

#### Symbols used:

- ✓ possibly resistant

Defined as: Supplier has sufficient indication that contact with chemical can be potentially accepted under the intended use conditions and expected service life. Criteria for assessment have to be indicated (e.g. surface aspect, volume change, property change).

- ✗ not recommended - see explanation

Defined as: Not recommended for general use. However, short-term exposure under certain restricted conditions could be acceptable (e.g. fast cleaning with thorough rinsing, spills, wiping, vapor exposure).

Contact DuPont for Material Safety Data Sheet, general guides and/or additional information about ventilation, handling, purging, drying, etc. ISO Mechanical properties measured at 160 mil (Hytrek® measured at 80 mil), IEC Electrical properties measured at 80 mil, all ASTM properties measured at 120 mil, and test temperatures are 73°F unless otherwise stated.

The information set forth herein is furnished free of charge and is based on technical data that DuPont believes to be reliable and falls within the normal range of properties. It is intended for use by persons having technical skill, at their own discretion and risk. This data should not be used to establish specification limits nor used alone as the basis of design. Handling precaution information is given with the understanding that those using it will satisfy themselves that their particular conditions of use present no health or safety hazards. Since conditions of product use and disposal are outside our control, we make no warranties, express or implied, and assume no liability in connection with any use of this information. As with any product, evaluation under end-use conditions prior to specification is essential. Nothing herein is to be taken as a license to operate or a recommendation to infringe on patents. Caution: Do not use in medical applications involving permanent implantation in the human body. For other medical applications, discuss with your DuPont customer representative and read Medical Caution H-50103-5.

Revised: 2017-10-18

Page: 11 of 12

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

#### North America

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

#### Asia Pacific

Tel: +81 3 5521 8600

#### Europe/Middle East/Africa

Tel: +41 22 717 51 11



Copyright 2017 DuPont. The DuPont Oval Logo is a trademark or registered trademark of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

# DuPont™ Zytel® 101F NC010

## NYLON RESIN

Copyright © 2017 DuPont or its affiliates. All Rights Reserved. The DuPont Oval Logo, DuPont™, The miracles of science™ and all products denoted with ® or ™ are registered trademarks or trademarks of E.I. du Pont de Nemours and Company or its affiliates.

To find out more, visit [DuPont Performance Polymers](#) or contact nearest DuPont location.

**North America**

Tel: +1 302 999-4592

Toll-Free (USA): 800 441-0575

**Asia Pacific**

Tel: +81 3 5521 8600

**Europe/Middle East/Africa**

Tel: +41 22 717 51 11

