

FILTRATION Connectors

Nordson MEDICAL offers durable chrome-brass metal quick connects that facilitate easy connection and replacement of your point-of-use water filters used in hospitals and for anti-legionella protection in public buildings. These new male and female products with 1/2" IPS threads add to an extensive portfolio of metal connectors offered by our LinkTech product line. The utility design of these connectors eliminates the brass adapters used to connect the water line to your filters, resulting in faster replacement, fewer leak points, and reduced labor and material costs. They are also available with shut-off configurations, preventing water spill-off as you work in tighter spaces. Ideal for use with cleaning agents, these quick connects are made of robust materials including chemically-resistant Viton o-rings and gaskets.

FEATURES & BENEFITS


- 1/2" IPS male & female thread connections
- Part of the 40CB chrome-brass series with larger 1/4" flow
- Valved & non-valved options to help prevent water spill-off, making work space more comfortable
- Eliminates use of brass adapter accessories to connect water lines to point-of-use filters
- Fewer leak points than what is used today, resulting in less labor & material costs
- Options to prevent bacterial residue build-up
- Viton o-rings & gaskets that can withstand cleaning agents

SPECIFICATIONS

- **Materials:**
 - Bodies & Terminations: chrome/brass
 - Internal Valves: Acetal
 - Internal Valve Springs: 316 stainless steel
 - O-Rings: Viton, other options available
 - Thumb Latch: Stainless steel
 - External Springs & Pins: Stainless steel
- **Performance Ratings:**
 - Flow Capacity: 1/4" (6.4 mm)
 - Operating Pressure: Vacuum to 250 psi (17.3 bar)
 - Temperature: -40°F (-40°C) to 180°F (82°C)
- **Terminations:**
 - 1/2" IPS male thread
 - 1/2" IPS female thread


FILTRATION Connectors

FEMALE OPEN FLOW STRAIGHT

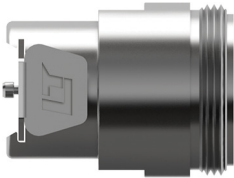


40CB-S3557

LinkTech 40CB Series
Female Connector,
Non-Valved, 15/16-27 Male
Sink Thread, w/NBR
Gasket, Chrome Brass

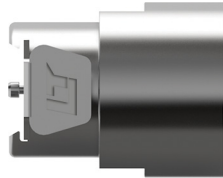


40CB-S3559

LinkTech 40CB Series
Female Connector,
Non-Valved, 55/64-27
Female Sink Thread, w/NBR
Gasket, Chrome Brass

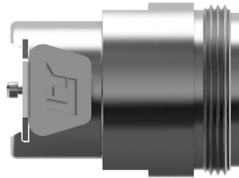


40CB-S3562

LinkTech 40CB Series
Female Connector,
Non-Valved, M24 x 1 Male
Sink Thread, w/NBR
Gasket, Chrome Brass

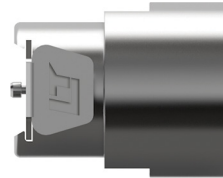

40CB-S3564


LinkTech 40CB Series
Female Connector,
Non-Valved, M22 x 1 Female
Sink Thread, w/NBR Gasket,
Chrome Brass

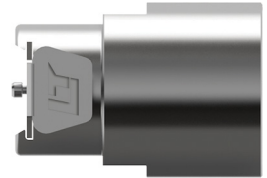

40CB-S35296


LinkTech 40CB Series
Female Connector,
Non-Valved, 1/2" IPS
Female Sink Thread, w/NBR
Gasket, Chrome Brass

FEMALE VALVED STRAIGHT

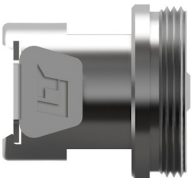


40CB-S35271

LinkTech 40CB Series Compact Female
Connector, Valved, M24 x 1 Male Sink Thread,
w/NBR Gasket, Chrome Brass

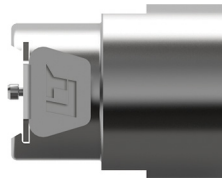

40CB-S35288


LinkTech 40CB Series Compact Female
Connector, Valved, M22 x 1 Female Thread,
w/NBR Gasket, Chrome Brass

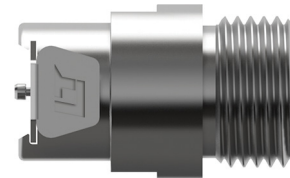

40CBV-S35297

LinkTech 40CB Series Female Connector,
Valved, 1/2" IPS Male Sink Thread, w/Viton
O-Ring, Chrome Brass

MALE VALVED STRAIGHT

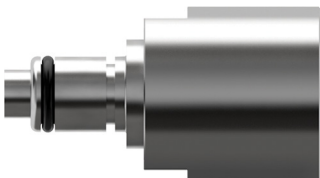

40CBV-P75242

LinkTech 40CB Series Male Connector, Valved, 1/2" IPS
Female Sink Thread, w/Viton Gasket and O-Ring,
Chrome Brass