

Cat. No.: V90125YMK

Instructions for Use


V90125YMK Manual Cap Conversion for Manufacturers and Users


!\Cautions:

Carefully follow the directions below to maintain the inflator integrity.

Installation of Manual Cap:

- 1. Compress manual cap ring an slide through the hole on the cap lablel.
- 2. Slide the cap ring over the inflator cap with the cap facing down (illustration #1).
- Twist cap clockwise and push the cap over the automatic inflator cap till the manual cap can go on no 3. further (illustration #2).
- Remove cylinder, inspect cylinder face (illustration #3). If cylinder face has no holes then replace firmly 4. in inflator. Do not over tighten & make sure green indicator clip is in place (illustration 4). See steps 8 & 9 of the V90000 Service Instructions for complete cylinder instructions.
- 5. During the repacking of the vest place the manual conversion tag so that it is visible outside of the vest.

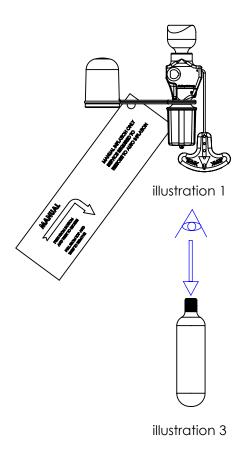

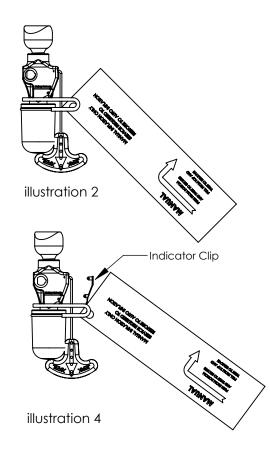

Removal of Manual Cap:

Twist cap clockwise (same direction as installation) and pull the cap away from the automatic inflator till 1. the manual cap slides off.