


DRAWING NO. 690DSBVGX		REV C	Manufacturing Drawing	REVISION HISTORY			
6991SBV O-Ring #2-123				REV	DESCRIPTION (ECO)	DATE	APPROVED
				B	Tolerance Update; ECO 12320	9/13/23	SR
				C	MOVE G SUFFIX TO P/N ADD SUFFIX FOR CORD COLOR ECO 12934	01/27/25	DK

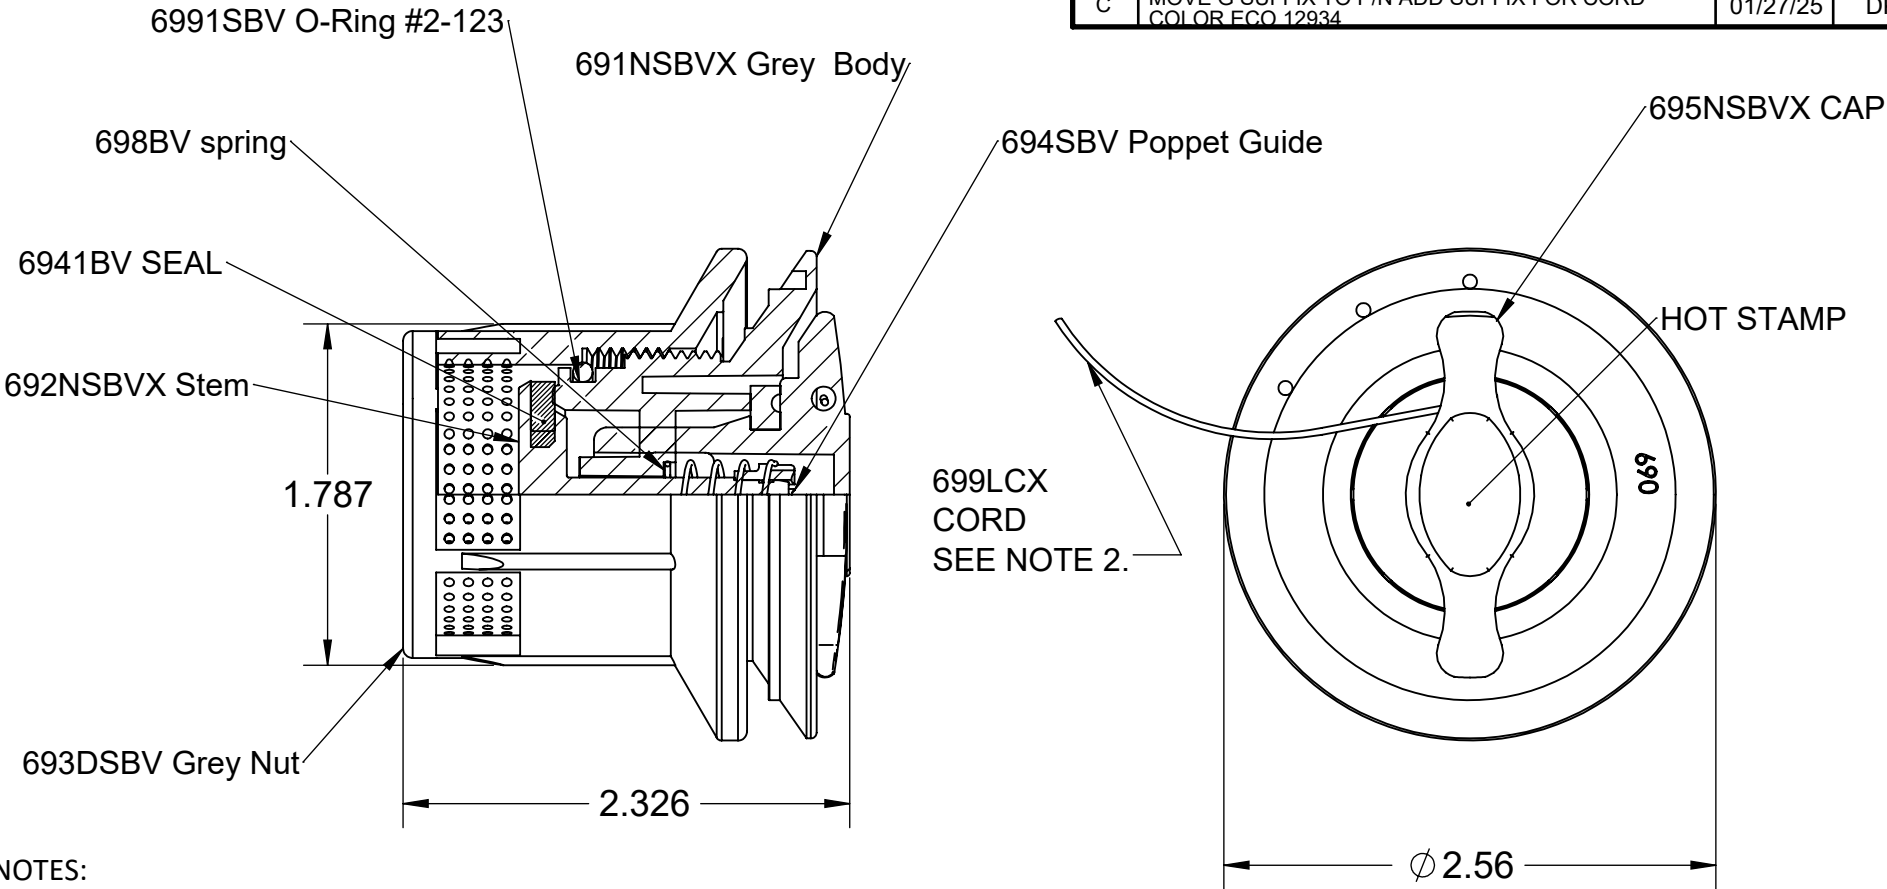


NOTES:

- THE PULL CORD MAY NOT FAIL OR SEPERATE FROM ATTACHED COMPONENTS WHEN A TENSION LOAD OF NOT LESS THAN 25 Lbs. IS APPLIED FOR AT LEAST 3 SECONDS.
- SUFFIX 'X' INDICATES CORD COLOR
NONE - WHITE
BK - BLACK
- ALL PLASTIC COMPONENTS MADE FROM ACETAL
CELCON M90UV OR DURACON M90-35 WITH UV STABILIZER.

MOLDED PARTS:
GATES, PARTING LINES, AND FLASH PER QUALITY CRITERIA

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS SOLE PROPERTY OF HALKEY-ROBERTS CORPORATION ST. PETERSBURG, FL. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HALKEY-ROBERTS CORPORATION IS PROHIBITED.

DRAWN BY	TW	DATE	1/19/2023
APPROVED BY	SR	DATE	1/20/2023
MATERIAL	SEE NOTE		
FINISH	N/A		
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: ANGULAR: ± 1° TWO PLACE DECIMAL ± .01 THREE PLACE DECIMAL ± .005		THIRD ANGLE PROJECTION	
			

SIZE		DRAWING NO.		REV
A		690DSBVGX		C
SCALE		DO NOT SCALE DRAWING		SHEET
1:1				1 OF 1

HR® Halkey-Roberts®
TITLE **SHORT BOAT VALVE DS**